Audio System Operators Instruction Manual

Prepared for



Fellowship Hall

Audio System Operating Instructions

Powering the system on/off	2
iPad account login and setup	3
Renkus-Heinz speaker configuration information	4



Operating instructions

Powering the system on and off:

The system uses a sequential switching system to power up and power down the equipment in the proper sequence to prevent damage to the speakers and equipment. The following steps will indicate the proper turn on/off of the system.

Power Up:

- 1. Locate the Furman power sequencer at the top of the main mixer rack.
- 2. Be sure the main power switch on the extreme right side is set to power on. (This switch should never be turned off)
- Locate the white push button marked "Start Sequence" on the left side of the unit and press to start the sequence operation. This will begin turning the equipment on in the proper order to prevent potential damage to equipment.
- 4. When the sequence is fully complete the indicator light on the extreme left of the plate above the Furman will light up blue. This indicates that the power has been applied to the amplifiers.

Power Down;

1. Press the white button marked "Start Sequence" on the extreme left of the Furman and press once. This will start the sequence turning the system off in the proper order.

Activating the Parlor overflow speaker:

The speaker in the Parlor can be turned on or off depending on the needs of the event. To do so follow the following steps.

NOTE: The power sequencing procedure above for turning the system on must be completed before the Parlor speaker can be switched.

- Locate the switch plate at the top of the equipment rack. On the left side there is a black pushbutton switch which
 is used for speaker control.
- 2. Press and hold the switch until the red indicator light comes on. This will power up the amplifier and route the main room audio signal to the Parlor speaker.

To power off the speaker repeat the above procedure. When the red indicator light goes off the speaker has been muted.



iPad Setup

iPad Apple ID: CHPCFHID@icloud.com

Password: John_3-16

Touch ID is disabled: Passcode: 574200

System birthday: Dec 3, 1980

ID Name: Sound System

Phone used for text: 513-703-0147



Renkus-Heinz DC12-2

The speakers are configured using a WiFi connection with the following configuration:

Connection must be made using an Android device.

The RHAPP must be downloaded and installed on an Android device.

Each speaker has a unique SSID to be able to access the control features.

Stage Left Speaker SSID: RH-DC-12-SL Stage Right Speaker SSID: RH-DC-12-SR

Password for both speakers is: CHPC5742 (Case sensitive)

Speakers are set as follows:

Distance of 40' Height 10' EQ Flat

Firmware was updated 12-5-2019

